

Katalog náhradních dílů pro
průmyslový šicí stroj

GARUDAN[®]

CT serie - UCP



ANITA B, s.r.o.

Hliníky 2068

680 01 Boskovice


Czech Republic

tel: +420 516 454 774


+420 516 453 496

fax: +420 516 452 751

e-mail: info@anita.cz

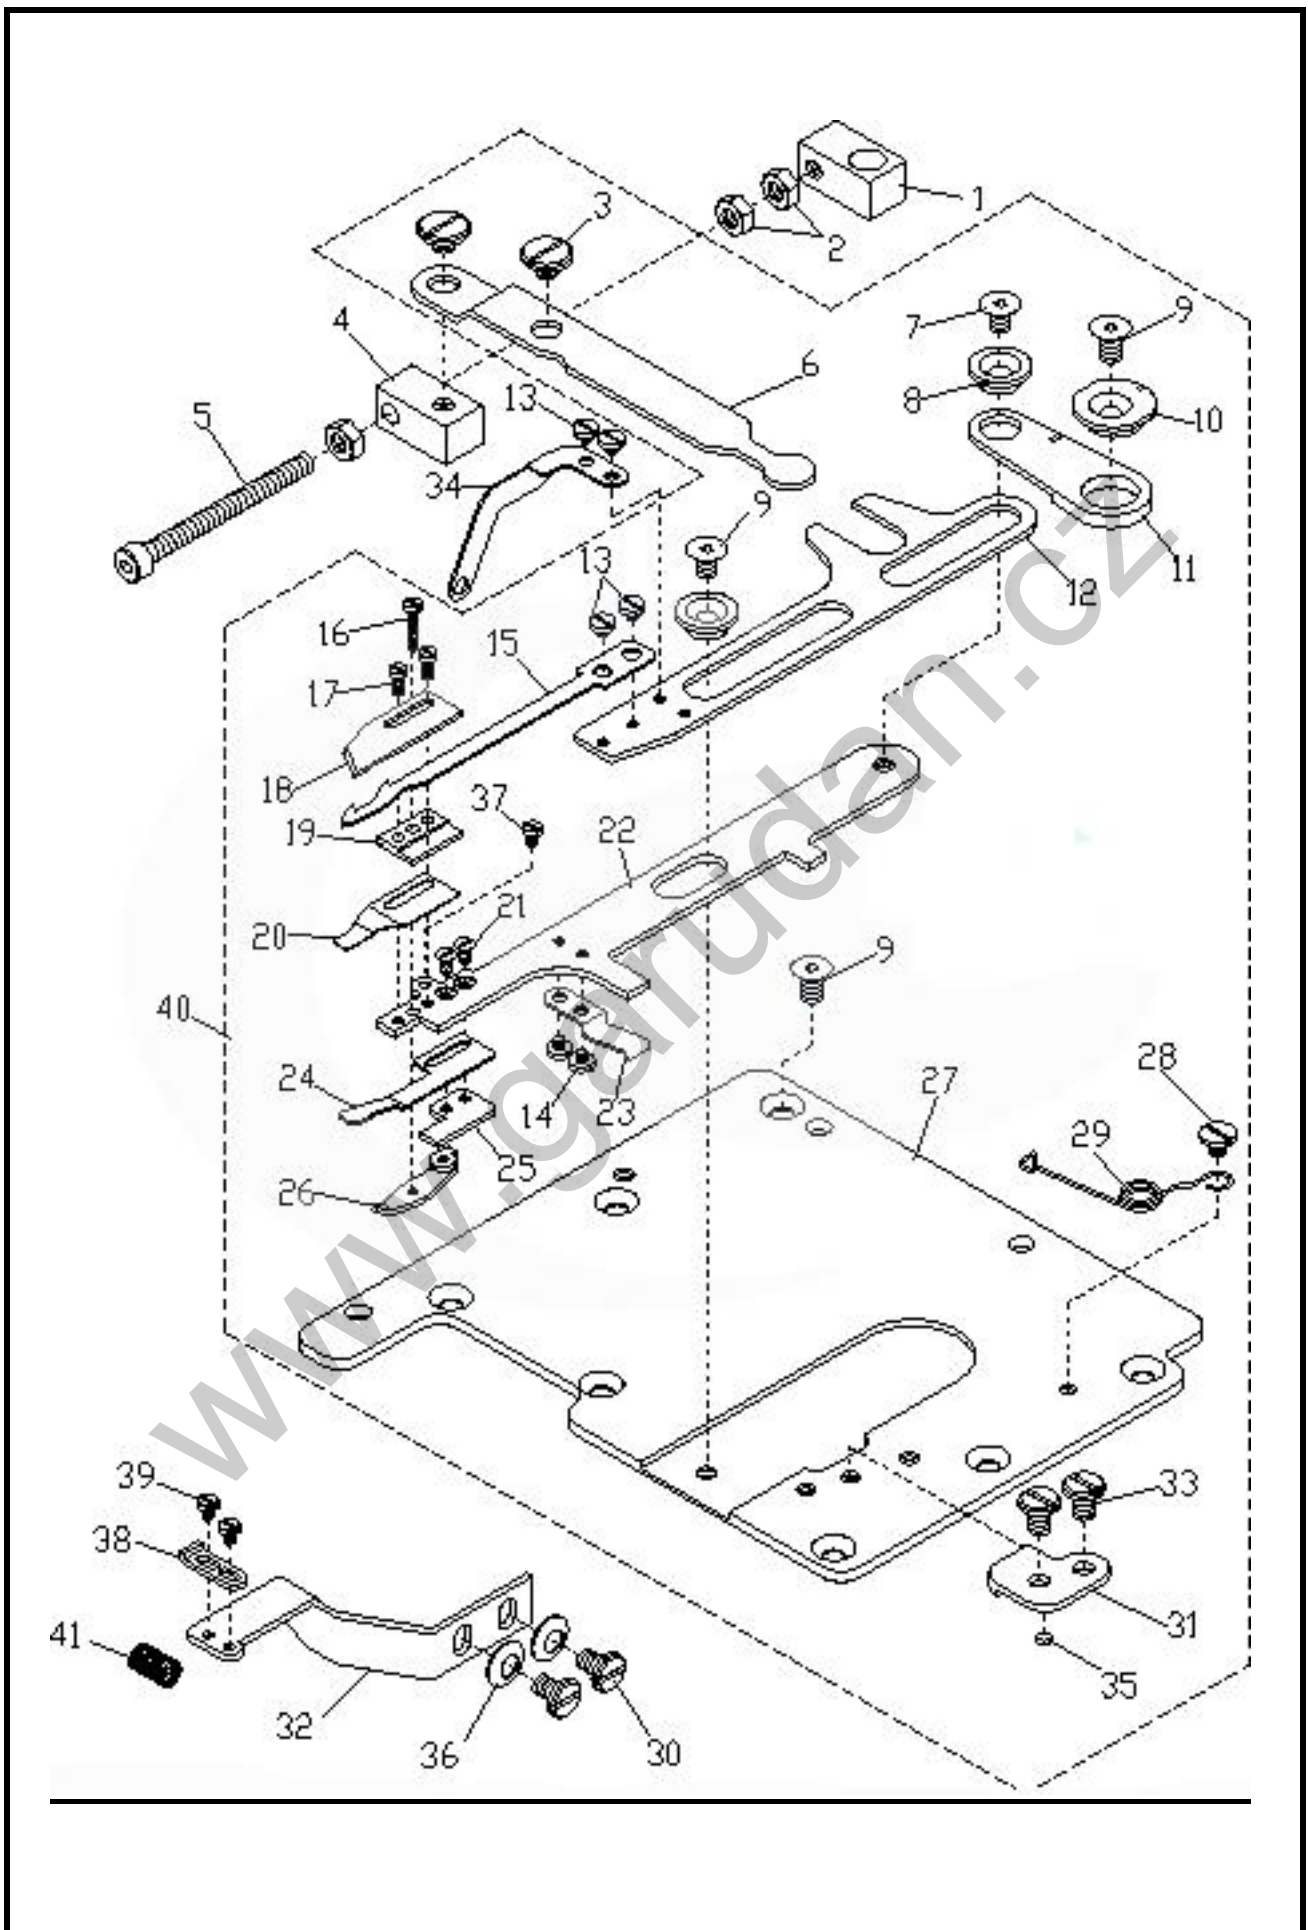

1.UCP Pneumatický odstřih			
Pozice	JKPOV	Popis	Počet
1	4UTB010101	Connenting Block	1
2	8MA05320408A	Nut (CT1028 M5-0.8*4)	3
3	8MB04280410G	Stud (UTB0103 M4-0.7*2)	2
4	4UTB010104	Connecting Block	1
5	8MM05324507A	Screw (UTB10105 M5-0.8*45)	1
6	4UTB010106	Driving Lever	1
7	8MQ04280608A	Screw (UTB0109 M4-0.7*8)	1
8	4UTB000108	Ring	2
9	8MQ04280808A	Screw (UTB0109 M4-0.7*8)	9
10	4UTB000110	Adjusting Ring	1
11	4UTB010111	Lever	1
12	4UTB010112	Lower Knife Carrier	1
13	8MB75180205A	Screw (UTB0113 M2.5-0.45*2)	4
14	8MB75180205A	Screw (UTB0113 M2.5-0.45*2)	2
15	4UTB000115	Lower Movable Knife	1
16	8MB02161004A	Screw (UTB0116 M2-0.4*9)	1
17	8MB02160505A	Screw (UTB0117 M2-0.4*4)	2
18	4UTB000118	Lower Fixed Knife	1
19	4UTB000119	Lower Movable Knife Guide	1
20	4UTB000120	Clamp Spring	1
21	8ME02160404A	Screw (CT12-15 M2-0.4*3)	2
22	4UTB010122	Lower Knife Holder	1
23	4UTB000123	Supplementary Spring	1
24	4UTB000124	Knife Pressure Spring	1
25	4UTB000125	Clamp Spring Pressure Holder	1
26	4UTB010126	Clamp Spring Adjusting Piece	1
27	4UTB010127	Crank Chamber Cover	1
28	8MB03200407G	Stud (UTB0128 M3-0.5*2)	1
29	4UTB000129	Spring	1
30	8MB04280608A	Screw (UTB0130 M4-0.7*6)	2
31	4UTB000131	Upper Knife Carrier Guide	1
32	4UTB010132	Lower Knife Carrier Guide	1
33	8MB85240507A	Screw (FT0538 M3.5-0.6*4)	2
34	4UTB010134	Thread Guide Eyelet	1
35	4UTB000135	Rubber Cushion	1
36	90DW040	Spring Washer	2
37	8MB02160304A	Screw (UTB0137 M2-0.4*3)	1
38	4UTB010138	Knock Block	1
39	8MB75180405A	Screw (CT0529 M2.5-0.45*3.5)	2
40	4UTB010140	Crank Chamber Cover Asm.	1
41	4UTB010141	Spring	1

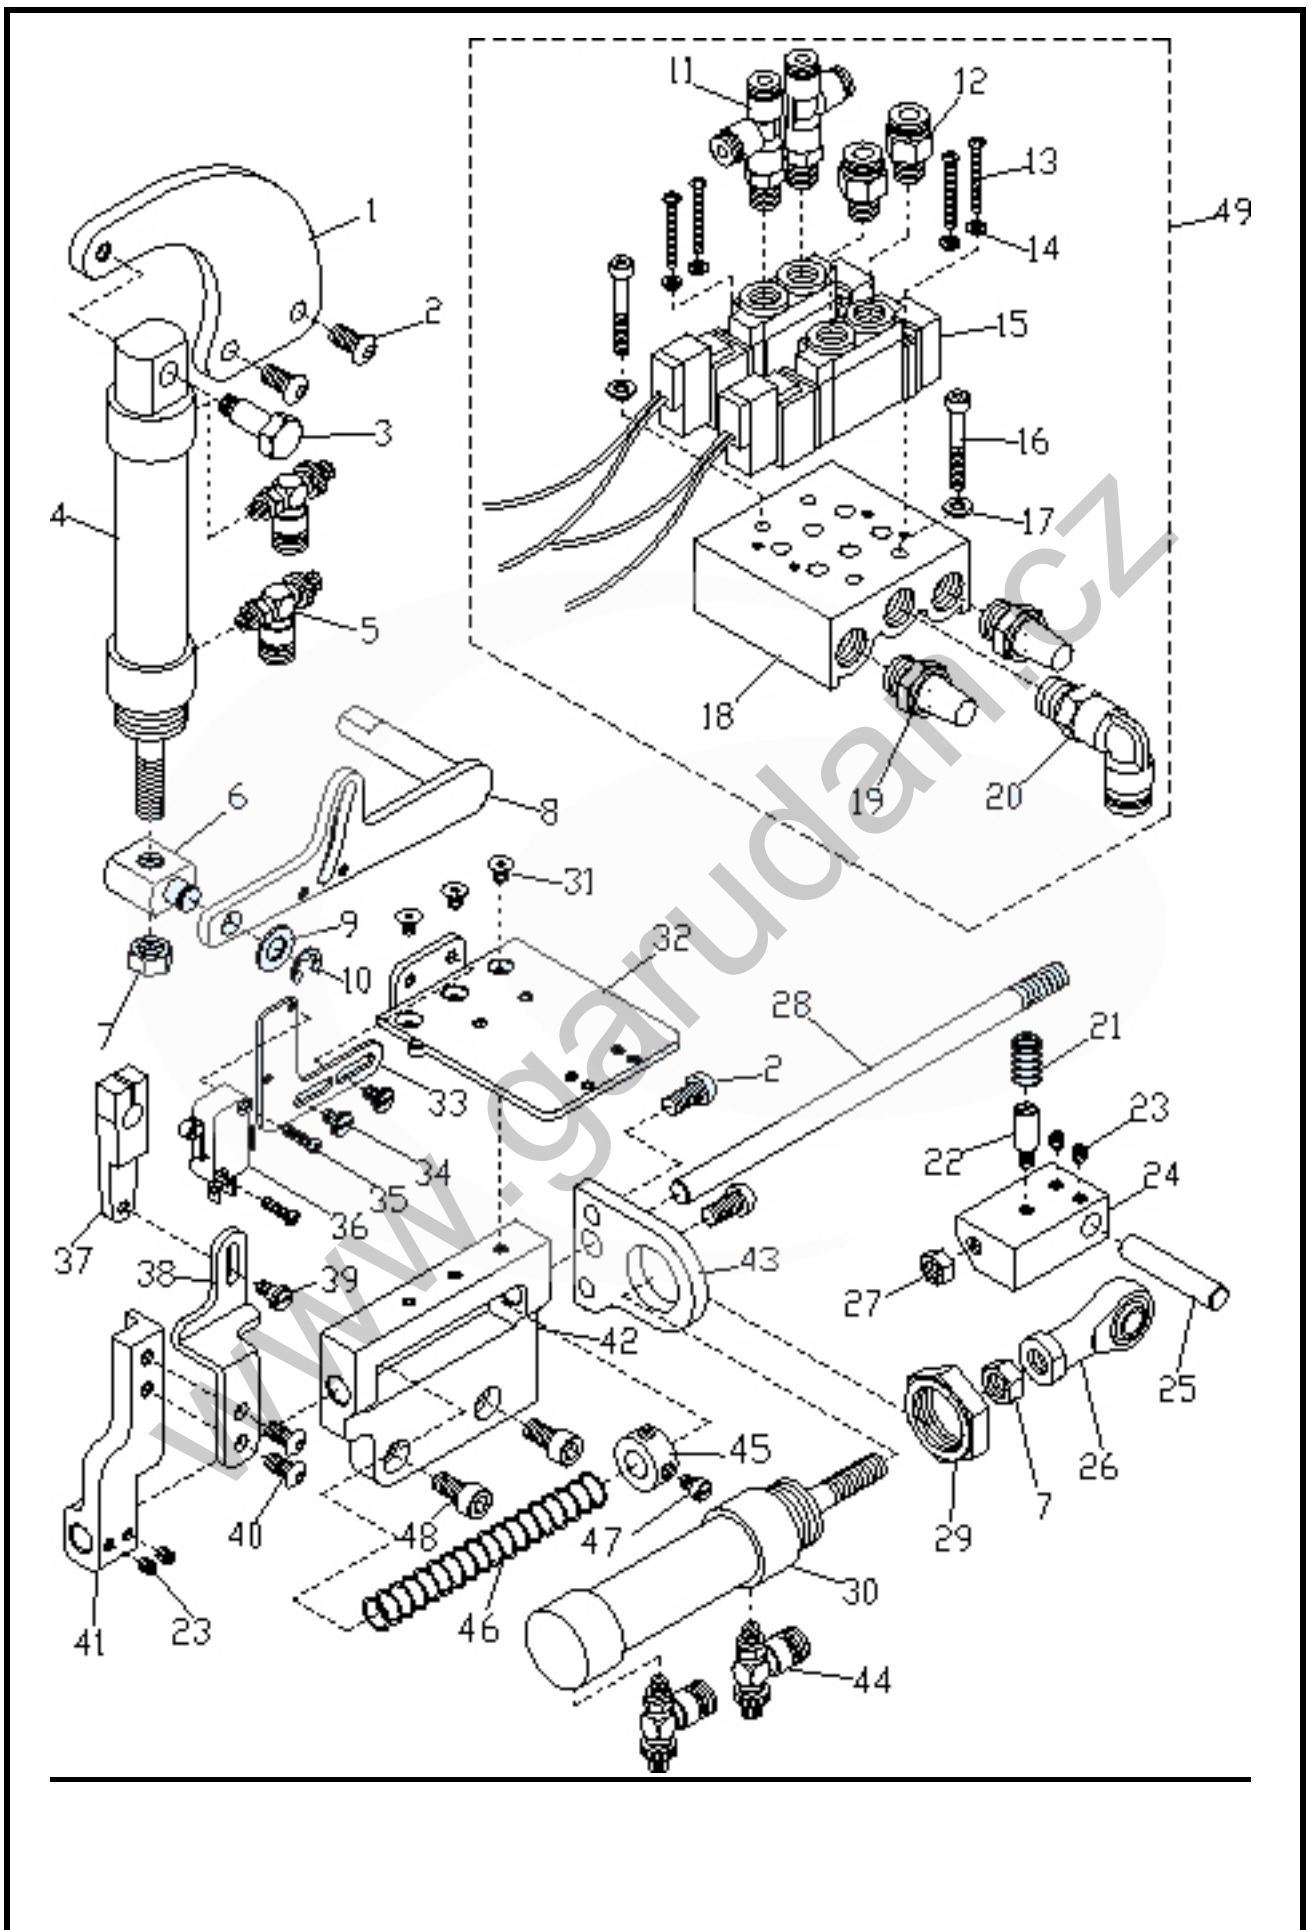

2.UCP Pneumatický odstřih			
Pozice	JKPOV	Popis	Počet
1	4UTB000301	Cylinder Holder Bracket	1
2	8MPO6401112A	Screw (UTB0302 M6-1*12)	4
3	8MK06402314G	Stud (UTB0303 M6-1*6)	1
4	4UTB000304	Cylinder	1
5	4UTB000305	Speed Controller	2
6	4UTB000306	Joint	1
7	8MA08400613A	Nut (RP10208 M8-1.25*6)	2
8	4UTB000308	Lifter Arm	1
9	2200000716	Washer	1
10	90ER060	E Ring	1
11	4UTB000311	Connector	2
12	4UTB000312	Connector	2
13	8MC03202606D	Screw (UTB0313 M3-0.5*26)	4
14	90SW030	Spring Washer	4
15	4UTB000315	Electromagnetic Valve	2
16	8MM04283007B	Screw (CT1359 M4-0.7*30)	2
17	90SW040	Spring Washer	2
18	4UTB000318	Electromagnetic Valve Base	1
19	4UTB000319	Silencer	2
20	4UTB000320	Elbow Connector	1
21	4UTB000321	Spring	1
22	8MB04280707M	Stud (FT0122 M4-0.7*7)	1
23	8MN04280400A	Screw (CT0229 M4-0.7*4)	4
24	4UTB010324	Plunger	1
25	4UTB000325	Shaft	1
26	4UTB010326	Plunger Connecting Rod	1
27	8MA08500513A	Nut (FTC10126 M8-1.25*5)	1
28	4UTB010328	Shaft	1
29	8MA22600729A	Nut	1
30	4UTB010330	Cylinder	1
31	8MQ04280808A	Screw (UTB0109 M4-0.7*8)	3
32	4UTB000332	Base	1
33	4UTB000333	Safety Switch Bracket	1
34	8MB04280608A	Screw (UTB0130 M4-0.7*6)	2
35	8MC03201306D	Screw (UTB0335 M3-0.5*12)	2
36	4UTB000336	Safety Switch	1
37	4UTB010337	Tension Release lever	1
38	4UTB010338	Connecting Plate	1
39	8MB04280908G	Stud (UTB0339 M4-0.7*4)	1
40	8MP05321210D	Screw (UTB0340 M5-0.8*11)	2
41	4UTB000341	Connecting Block	1
42	4UTB000342	Trimming Cylinder Support	1
43	4UTB000343	Cylinder Bracket	1
44	4UTB000344	Speed Controller	2
45	2200000822	Collar	1
46	4UTB000346	Spring	1
47	8MC95300606F	Screw(CT0823 M4.5-0.75*5)	1
48	8MM06401610A	Screw(CT0625 M6-1*16)	2
49	4UTB01A0349	Electromagnetic Value Asm.	1